
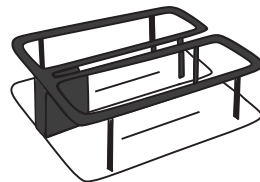


NÁVOD K MONTÁŽI

Police do sprchy 3091

CZ

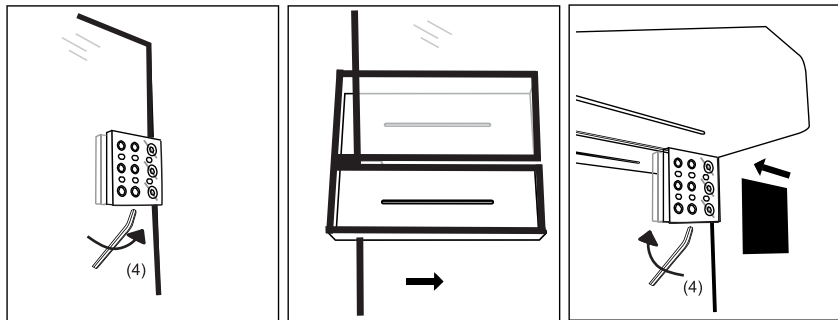

1-2-3

1. Pomocí přiloženého imbusového klíče povolte všech šest imbusových šroubků na polici.
2. Nasadte polici na sklo sprchového koutu.
3. Pomocí imbusového klíče znovu dotáhněte všech šest šroubků a nasadte černou okrasnou krytku.



Údržba

Povrch výrobku čistěte pouze jemným hadříkem namočeným v mýdlové vodě nebo v roztoku vody s octem. K čištění nepoužívejte bělidla, agresivní čisticí prostředky, dezinfekční prostředky, kuchyňskou sůl ani jiné podobné látky. Tyto prostředky mohou poškodit povrch výrobku!

INSTALLATION INSTRUCTIONS

Shower shelf 3091

EN

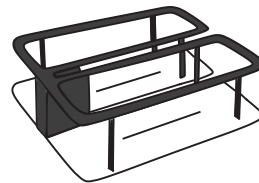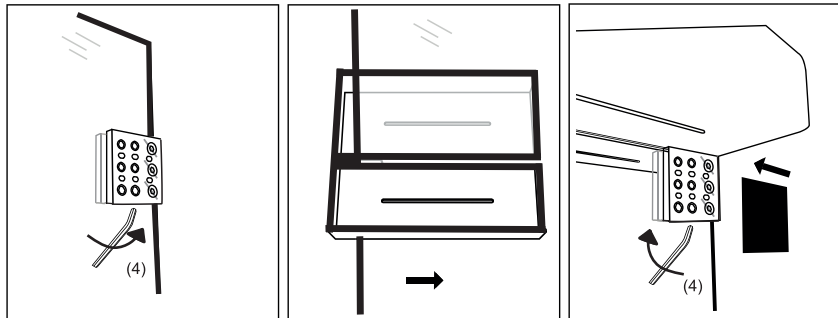

1-2-3

1. Using the included Allen key, loosen all six Allen screws on the shelf.
2. Slide the shelf onto the prepared mounting plate.
3. Using the Allen key, retighten all six screws and attach the black decorative cover.

Maintenance

Clean the surface of the product only with a soft cloth moistened with soapy water or a solution of water and vinegar. Do not use bleach, abrasive cleaners, disinfectants, kitchen cleaners or any other similar products. These products may damage the surface of the product!